

Under Tower Indurators

Installation Guide | Ver 0.9

CRMC-0060



Under Tower Indurators

Installation Guide

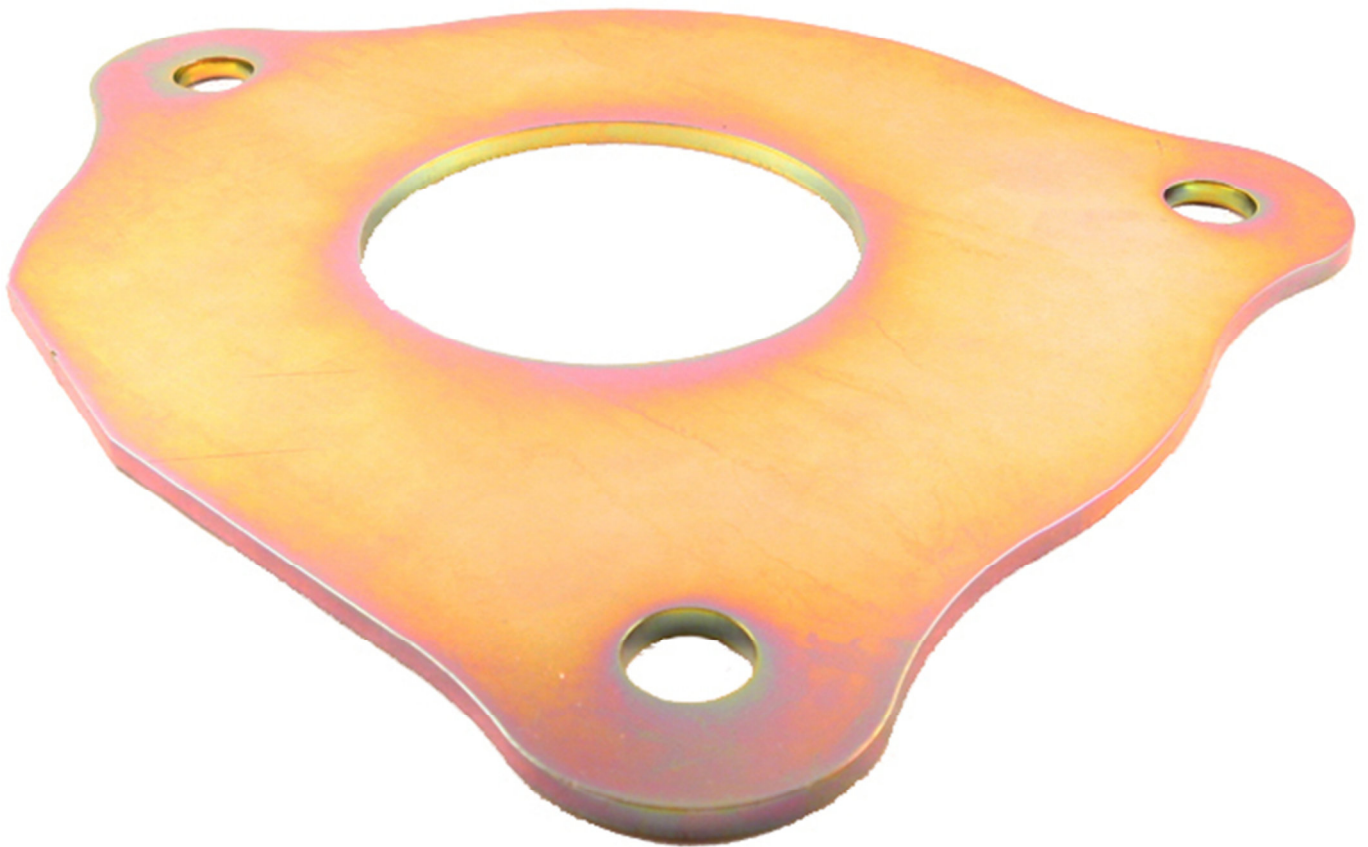


Table of contents

Overview

Thank you for purchasing the Under Tower Indurators from CravenSpeed. The piece is made from the highest grade materials and is guaranteed to be free from defects.

Parts included are:

1 ea Set of under tower inducators

Tools required are:

Torque Wrench

Metric Socket Set

Procedure.

1. Jack the car to rest on jack stands.
2. Remove the 3 nuts from the drivers side strut tower and lower the wheel carefully.
3. Remove the 3 nuts from the passenger side tower and lower that wheel carefully.
4. Take one plate and visually determine its orientation based on the shape of the top of the strut tower.
5. Now bring that plate up through the wheel well and set in, in the proper orientation, on the 3 studs of the strut.
6. Take second plate and do the same on the passenger side.
7. Once the plates are in place on the top of the struts, you will need to tower the car back onto one strut at a time.
8. Have one person line up the three studs with the holes in the tower while the other very slowly lowers the car into place, then repeat on the other side.
9. Once the car is again resting on the wheels, torque the nuts to 25 FT/LBS.

If you have any questions about this installation, please give us a call at (503)505-6886 from Monday - Friday between 8am and 4:30pm Pacific Time and we will be glad to give you a hand.

We love pictures too! If you have some nice photos of our products that you would like to share with us you can email them to: support@cravenspeed.com

CravenSpeed, 14010-A SW 72nd Avenue, Portland, OR, 97224, 503.505.6886

www.cravenspeed.com

Pubblicato da [Google Drive](#)—[Segnala una violazione](#)—Aggiornato automaticamente ogni